



MODERN SPARE
www.modernspare.com

1

First and foremost, THANK YOU for your purchase of our complete spare tire kit for your vehicle. As fellow car enthusiasts, we have put a great deal of time and energy into delivering a stellar product for your car. In this kit, you will find everything that you need to quickly and efficiently change a flat tire on your vehicle. **Please read entire instructions before using the spare tire kit Including the Vehicle Lifting Guide on pages 2-4:**

NOTE - When driving your Tesla with the spare tire mounted, set your traction control system to what is referred to as “Slip Start” mode. To engage Slip Start mode on your control panel, Touch Controls > Driving > Traction Control > Slip Start. Your control panel will indicate Slip Start mode is engaged. Do not use cruise control or Autopilot when in Slip Start mode.

General Steps-

1. When changing a flat, it is best to do so on stable level ground away from traffic.
2. Apply the parking brake, it is also our recommendation to chock the vehicle's wheels.
3. Remove tire and wheel from carrying case.
4. Remove kit contents from your vehicle. If your kit contains a carrying case, please remove the tire and wheel from the carrying case. Once the tire and wheel is removed you will find a zipper pocket in the bottom of the case. Open the pocket to remove the lug wrench, scissor jack, and disposable tire bag.
5. Many vehicles have specific lifting points that must be used to safely lift the vehicle. **Prior to raising the vehicle it is very strongly recommended that you consult your owner's manual for safe lifting procedures. Failure to do so may result in bodily harm, death, or significant damage to the vehicle.** Included in these instructions in a separate page is a general guide for lifting Tesla vehicles. This is not to be considered a complete guide but rather a document to bring attention to the specific lifting procedures for Tesla vehicles. As mentioned above, it is strongly recommended that you consult your owner's manual for complete and safe instructions.
6. Prior to raising the vehicle, it is suggested to loosen the lug nuts on the flat tire that you wish to change. *On some Tesla models, simple plastic lug nut covers may be present. They will need to be removed prior to loosening the lug nuts.* Do not completely remove the lug nuts, only loosen them to where they are still snug. Please align the rubber pad of the scissor jack with the jacking point closest to the tire that you are changing. Please consult the owner's manual for complete jacking instructions.
7. Raise the vehicle using the ratcheting scissor jack using safe jacking procedures as found in the owner's manual. Ensure that the scissor jack is on stable level ground with it properly aligned with the specified jacking point. The ratchet can operate in a clockwise or counterclockwise direction by using a small switch on the side of the ratchet. **Once the vehicle is raised or supported by the jack do not place yourself or any part of your body under the vehicle.**
8. Visually check the jack to see that vehicle has been securely lifted. Once confirmed, completely remove the lug nuts and flat tire. Place flat tire in included disposable bag.
9. Place Modern Spare wheel and tire on the vehicle using the OEM lug nuts. **Please note that the wheel contained in your kit contains two bolt patterns. For Tesla vehicles, use the 5 bolt holes that align with the 5 spokes of the wheel.** Ensure that the lug nuts are tight and will not come loose (approximately 100-140 ft-lbs).
10. Lower vehicle using ratcheting scissor jack, place flat tire and kit contents in your vehicle.

Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH (M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use

Modern Spare does not assume any liability, express or implied for product use. User assumes all liability and responsibility for product use

TESLA



MODERN SPARE
www.modernspare.com

2


That's it, you're done and on your way! Please take caution when driving on a spare. Although it is capable of operating for a long distance it is designed to be used on a temporary basis and does not have the same traction or performance capability of a full size OEM wheel & tire. Should you have any questions regarding your kit, please contact us via our website or (801) 896-3395

TESLA VEHICLE LIFTING GUIDE:

Please note that the below guide is not to be used as complete instructions, but rather as a general guide to bring attention to the specific jacking procedure required for Tesla vehicles. For complete instructions for safe jacking/lifting of your Tesla please consult your owner's manual. Modern Spare does not assume any liability, express or implied for product use or any damage, bodily injury, or death sustained in product use to raise or jack vehicle.

HELPFUL TIP

The jack is to be used by placing it parallel (length-wise) with the vehicle as shown in this diagram.

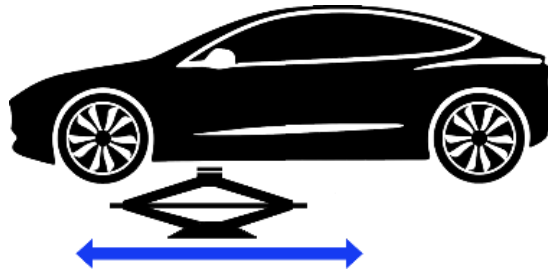

REMEMBER - ONLY RAISE VEHICLE AT PROPER JACKING LIFT POINTS

Use the below steps as a reference for lifting your vehicle. Please consult your owner's manual for vehicle-specific instructions. Also, please ensure to thoroughly read jacking warnings on page 3 of these instructions and your owner's manual before beginning jacking procedures.

1. If your vehicle is equipped with Smart Air Suspension, it automatically self-levels, even when power is off. Use the touchscreen to set the suspension as follows:
 1. Touch Controls > Suspension .
 2. Press the brake pedal, then touch Very High to maximize the height of the suspension.
 3. Touch Jack to disable self-leveling. When Jack mode is active, Tesla vehicles display this indicator light on the instrument panel, along with a message telling you that active suspension is disabled.
2. Position lifting jack at the vehicle-specific lifting point closest to the tire to be changed. DO NOT position the lifting jack under the Battery.
3. Carefully raise the jack ensuring the lift point pads remain in the correct positions.

Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH (M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use

Modern Spare does not assume any liability, express or implied for product use. User assumes all liability and responsibility for product use

TESLA



MODERN SPARE

www.modernspare.com

3

Note: Jack mode may be unexpectedly enabled in situations where an object is supporting the vehicle's weight (for example the bumper of the vehicle is resting on a curb).

Warning: If your vehicle is equipped with Smart Air Suspension, it automatically self-levels, even when power is off. You MUST disable this system by engaging Jack mode before lifting or jacking. If you do not disable Smart Air Suspension, your vehicle can attempt to self-level, causing serious damage, bodily injury, or death.

Warning: Never raise your vehicle when the charging cable is connected, even if charging is not in progress.

Warning: Do not work on an incorrectly supported vehicle. Doing so can cause serious damage, bodily injury, or death.

Warning: Do not place yourself or any part of your body beneath the vehicle while it is being supported by a jack alone. Ensure that the vehicle is supported by appropriate jack stands prior to working beneath vehicle.

Caution: DO NOT lift from under the Battery. Place the lift arm pad under the body rails only. The locations illustrated are a guide showing general lifting points on Teslas. For complete instructions consult your owner's manual. Lifting at any other points can cause damage. Damage caused by lifting your vehicle is not covered by Modern Spare

Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH (M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use

Modern Spare does not assume any liability, express or implied for product use. User assumes all liability and responsibility for product use


TESLA




MODERN SPARE
www.modernspare.com

4

Our wheel is a dual PCD (bolt pattern) wheel which gives it the ability to fit multiple makes and models of vehicles. For Tesla vehicles, use the 5 lug holes that align directly with the spokes of the wheel.

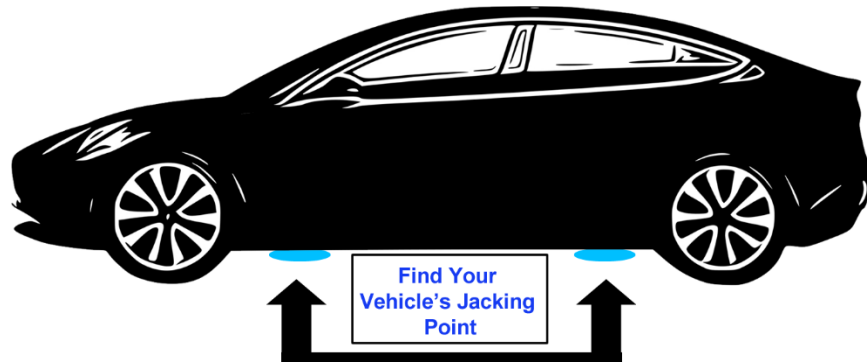

*Please note that jacking points on vehicles may vary depending on your vehicle's make and model. Please check the user's manual if needed. Ensure to align the rubber jack pad of the scissor jack to the jacking point slot on your vehicle as shown. Failure to do so could place an uneven load on the jack resulting in jack failure.

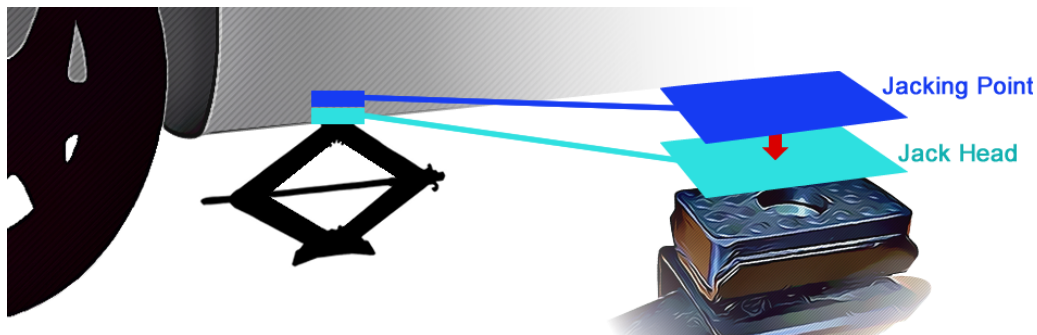

In addition to these jack placement instructions please ensure that you use the scissor jack on level ground with the vehicle stabilized. Ensure that the vehicle is in park with the parking brake engaged prior to lifting. If at all possible, it is preferable to chock the wheels to further stabilize the vehicle prior to lifting. Use only approved jacking points as found in your owner's manual with the scissor jack base being placed on level solid ground directly beneath the lifting point of the vehicle. Please also check your vehicle's owner's manual for any vehicle-specific instructions prior to lifting. Most importantly, never place yourself or any part of your body under the vehicle while it is raised with the scissor jack. If you have any questions or are unsure about jack placement please directly contact Modern Spare @ (801) 896-3395 or info@modernspare.com

Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH (M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use

Modern Spare does not assume any liability, express or implied for product use. User assumes all liability and responsibility for product use

TESLA