


First and foremost, <u>THANK YOU</u> for your purchase of our complete spare tire kit for your vehicle. As fellow car enthusiasts we have put a great deal of time and energy into delivering a stellar product for your car.

In this kit you will find everything that you need to quickly and efficiently change a flat tire on your vehicle. To use, please follow the below steps and read full instructions prior to beginning:


- 1. When changing a flat, it is best to do so on stable level ground away from traffic.
- 2. Apply parking brake and chock wheels.
- 3. Remove tire and wheel from carrying case.
- 4. Once the tire and wheel is removed you will find a zipper pocket in the bottom of the case. Open the pocket to remove the lug wrench, scissor jack, and disposable tire bag.
- 5. Most vehicles have 4 different designated lifting points located by the rocker panels near each wheel. Essentially, it is an opening that allows access to the pinch weld lifting point and should be used to safely lift the vehicle. Prior to raising the vehicle loosen the lug nuts on the flat tire that you wish to change. Please align the jacking pad of the scissor jack with the jacking point closest to the tire that you are changing. Please consult owner's manual prior to lifting vehicle for complete lifting instructions and/or specific vehicle lifting procedures. Please see example below:

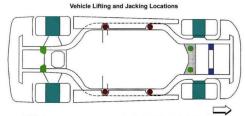


- Raise vehicle using the ratcheting scissor jack. The ratchet can operate in a clockwise or counterclockwise direction by using a small switch on the side of the ratchet. <u>Do not place</u> yourself or any part of your body under the vehicle while being raised or supported by the jack.
- 7. Completely remove the lug nuts and flat tire. Place flat tire in included disposable bag.
- 8. Place Modern Spare wheel and tire on the vehicle using the included lug nuts. Ensure that the lug nuts are tight and will not come loose (approximately 100-140 ft lbs).
- 9. Lower vehicle using ratcheting scissor jack, place flat tire and kit contents in your vehicle.
- 10. Turn traction control and active handling off if equipped while driving on the spare. Failure to do so may result in vehicle warning lights.

That's it, you're done and on your way! Please take caution when driving on a spare. Although it is capable of operating for a long distance it is designed to be used on a temporary basis and does not have the same traction or performance capability of a full size OEM wheel & tire. Should you have any questions regarding your kit, please contact us via our website or (801) 896-3395.

\*Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH ( M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use\*

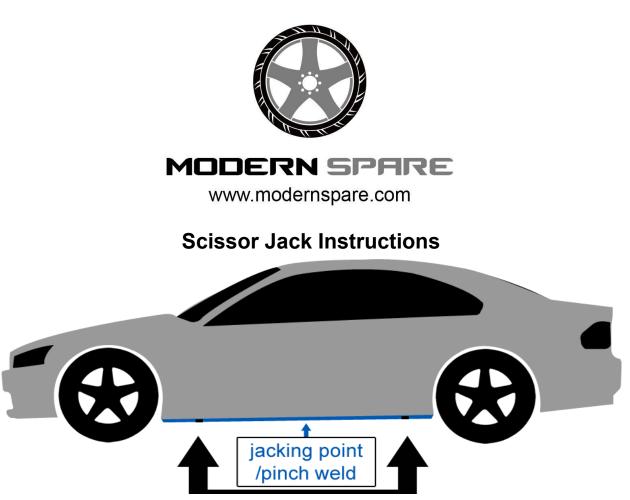

Please ensure to align the slot on the top of the scissor jack pad with the pinch weld jacking point as shown. To achieve optimal jack stability the full pinch weld jack point must be within the slot on the scissor jack pad. Failure to do so could place an uneven load on the jack resulting in jack failure.

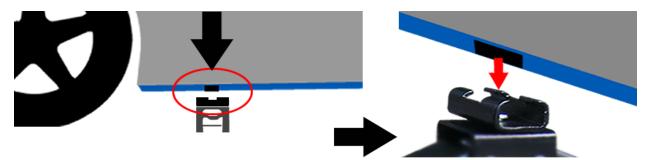

In addition to these jack placement instructions please ensure that you use the scissor jack on level ground with the vehicle stabilized. Ensure that the vehicle is in park with the parking brake engaged prior to lifting. If is also recommended to chock the wheels to further stabilize the vehicle prior to lifting. Use only approved jacking points as found in your owner's manual with the scissor jack base being placed on level solid ground directly beneath the lifting point of the vehicle. Please also check your vehicles owner's manual for any vehicle specific instructions prior to lifting. **Most importantly, never place yourself or any part of your body under the vehicle while it is raised or supported by the scissor jack. Doing so may result in significant bodily injury or death.** 

If you have any questions or are unsure about jack placement please directly contact Modern Spare @ (801) 896-3395 or info@modernspare.com.

\*Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH ( M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use\*



## **Trunk Installation Instructions**

We want our spare tire solution to be as convenient as possible. As such, we have designed our kit to fit in the available spare tire well of your vehicle. Please install using the following instructions:

- 1. Lift deck lid (floor of trunk).
- 2. If equipped, remove inflator kit components as well as foam inserts.
- 3. Position the wheel and tire in the spare tire well with the wheel spokes facing downward.
- 4. Assemble the included securing hardware by sliding the round plastic disc onto the bolt, followed by the wing nut. Tighten the wing nut just enough to hold the plastic disc in place.
- 5. Insert the bolt into the center of the spare tire (the rounded end of the bolt should be facing down).
- 6. Once the bolt is positioned in the center of the tire, align it with the slot on the trunk floor. Slide the bolt into the slot and ensure the tire is properly centered.
- 7. Tighten the wing nut to secure the Wheel and Tire in place.
- 8. Take the strap and slide one end through one of the finger holes on the plastic disc.
- 9. Place the scissor jack and wrench in place, ensuring the foam protection is intact, then secure them by wrapping the strap around the tools to keep them from moving.
- 10. Lower and secure deck lid (trunk floor)

\*Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH ( M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use\*