




MODERN SPARE

www.modernspare.com

First and foremost, THANK YOU for your purchase of our complete spare tire kit for your corvette. As fellow vette owners we have put a great deal of time and energy into delivering a stellar product for your car.

In this kit you will find everything that you need to quickly and efficiently change a flat tire on your corvette. To use, please follow the below steps:

1. When changing a flat, it is best to do so on level ground away from traffic.
2. Apply parking brake.
3. Remove tire and wheel from carrying case.
4. Remove kit contents from your vehicle. If your kit contains a carrying case, please remove the tire and wheel from carrying case. Once the tire and wheel is removed you will find a zipper pocket in the bottom of the case. Open the pocket to remove the lug wrench, scissor jack, and disposable tire bag.
4. Your corvette has 4 different designated lifting points located on the rocker panels near each wheel. Essentially, it is an opening that allows access to the frame and must be used to safely lift the vehicle. Prior to raising the vehicle loosen the lug nuts on the flat tire that you wish to change. Please align the rubber pad of the scissor jack with the jacking point closest to the tire that you are changing. Please see image below:

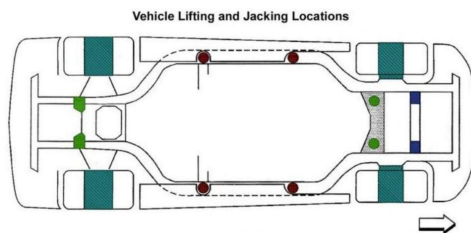

5. Raise vehicle using the ratcheting scissor jack. The ratchet can operate in a clockwise or counterclockwise direction by using a small switch on the side of the ratchet. Once the vehicle is raised do not place yourself or any part of your body under the vehicle.
6. Completely remove the lug nuts and flat tire. Place flat tire in included disposable bag.
7. Place Modern Spare wheel and tire on the vehicle using the OEM lug nuts. Ensure that the lug nuts are tight and will not come loose (approximately 100 ft lbs).
8. Lower vehicle using ratcheting scissor jack, place flat tire and kit contents in your vehicle.
9. Turn traction control and active handling off if equipped while driving on the spare. Failure to do so will result in vehicle warning lights.

That's it, you're done and on your way! Please take caution when driving on a spare. Although it is capable of operating for a long distance it is designed to be used on a temporary basis and does not have the same traction or performance capability of a full size OEM wheel & tire.

CORVETTE

Tire comes prefilled with 50 psi of pressure & has max speed rating of 81 MPH (112 M Rating). When handling take caution not to puncture or damage the tire. It is recommended to periodically check your spare tire pressure so as to maintain it for safe vehicle use

Modern Spare does not assume any liability, express or implied for product use. User assumes all liability and responsibility for product use